

FRONT

FOLD

FOLD

FOLD

FOLD

FOLD

FOLD

Congratulations on your purchase of this brilliant little Gecho speaker

Your box should include:

- The speaker
- One Micro-USB to USB cable
- This quick start guide

Your purchase also includes a **free song download** of 'Black Submarine' by **Black Submarine**, as featured on the **Gecho** promotional video which can be viewed at www.gechoaudio.com.



Easy set up


First things first: charge the speaker for at least **20 minutes** before you use it.

01. To tell if the speaker needs charging, open the dust cover, **02.** slide the switch to 'on'. **03.** You'll hear a beep and the light at the bottom will flash (underneath the speaker). If the speaker is beeping and the light is flashing rapidly, then the speaker battery needs charging.


01.



02.

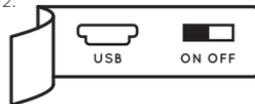


03.

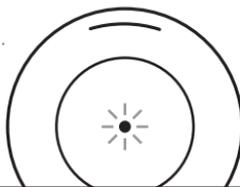

04. To charge, plug the Micro-USB cable into the back of the speaker, plug the other end into your computer's USB port, and charge. Easy. The light will stay red during charging.

04.

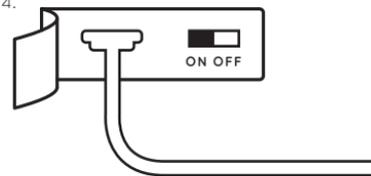

05. Next you'll need to set up your Bluetooth device (phone, tablet, computer). First, make sure the Gecho speaker is turned on. Then, turn on your phone's Bluetooth and search for devices. Select Gecho, which will connect you to the speaker. The speaker will beep once when it's connected.



05.

Bluetooth for Android

Go to **SETTINGS > BLUETOOTH**

Turn on Bluetooth.

If your device doesn't search automatically, press **SEARCH FOR DEVICES**.

Select **Gecho**, which is the speaker, and you'll connect automatically.

Bluetooth for iPhone/iOS

Go to **SETTINGS > BLUETOOTH**

Turn on Bluetooth.

Your iOS device should automatically search for discoverable devices, but if it doesn't, press **SEARCH FOR DEVICES**.

Select **Gecho**, then **YES**.

Job done.

Using the speaker

06. See the + and - key on the speaker? That's the volume control. You can also use the volume controls on your phone, tablet or any other device the speaker is connected to.

06.



FOLD

FOLD

FOLD

FOLD

FOLD

FOLD

FRONT

FOLD



FOLD

FOLD



FOLD

FOLD




FOLD

Using your speaker with your mobile phone?

07. You can also press the middle control on the speaker - < - to answer the call.*

** For best hands free experience, do not leave the speaker stuck to a phone as this may cause interference.*

07.

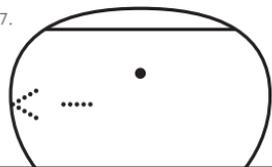


Limited warranty statement

Your new speaker has a one year warranty, which covers it in case it stops working all by itself.

Visit www.gechoaudio.com to find out more if you have a problem.

The speaker's microphone is just above the volume - key, just to the right, handy for conference or group calls.

It's only small so you might need to look closely.

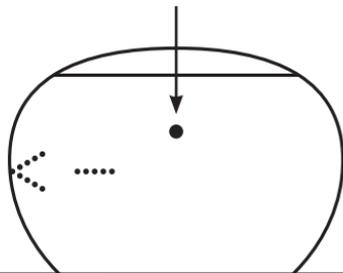

Stay safe

Only plug the USB cable into a device that has the correct USB port.

Disconnect power from the speaker by unplugging the USB end of the cable, never the Micro-USB end.

Don't insert anything except the Micro-USB into the speaker.

08. The suction cup attaches to pretty much any smoothish surface. So you can stick it inside your car and use it as a hands free kit for calls, to the back of your smartphone to use it as a stand, or in your shower so you can sing along in the mornings and annoy your neighbours.* You can even stick it to your forehead and dance around looking silly.

These are only some of the places we've tested it. Feel free to get creative.

** Be careful not to leave the speaker submerged in water, though. It's a tough little thing, but water resistant rather than made for diving.*

08.



ON A WINDOW



IN THE SHOWER



ON THE TABLE



IN THE CAR



BACK OF TABLET



BACK OF PHONE

Don't get tempted to take the speaker apart. Visit www.gechoaudio.com to find out how to contact us and we'll resolve any issues for you. Any self-attempted repairs will immediately void your warranty.

Keep batteries away from excessive heat and out of direct sunlight. Don't attempt to replace the batteries as this will damage the speaker and void your warranty.

Be careful not to carry a phone, tablet or other device by the speaker - always carry the devices separately. We wouldn't want any accidents.

We'd recommend not sticking the speaker above anything of value - or sticking it at a great height - in case the surface is not completely smooth and the speaker comes loose.

We also recommend removing the speaker from wherever it's been stuck once you've finished using it.

Be careful not to leave the speaker submerged in water. It's a tough little thing, but water resistant rather than made for diving.

FOLD



FOLD

FOLD



FOLD

FOLD



FOLD