

FORGE

stainless steel floor standing bath shower mixer with handset

20004010655



DIMENSIONS:

| | |
|--------------------|--------|
| Height of the body | 1022mm |
| Reach of the spout | 250 mm |

CARE AND MAINTENANCE:

To maintain the appearance of this product, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Any other cleaning action will invalidate your warranty.

The aerator should be unscrewed and cleaned periodically in warm water.

Abrasive cleaners, scouring cleaners and acidic cleaners must not be used under any circumstances. Avoid contact with all solvents (including chlorinated solvents, ketones or acetones as these may result in surface deterioration or etching).

Isolate the water to the tap before performing any form of internal maintenance.

CLEANING THE CARTRIDGE

The concealed cartridge should give trouble free service, but in the event of any problems, servicing is straight forward.

With an Allen key loosen the screw, on the handle. Pull off the handle and unscrew the cover. Using the correct size spanner unscrew and remove the retaining nut. Pull out the cartridge taking note of its orientation. Wash the cartridge with clean running water and make sure that any trapped debris has been removed. Dry and lightly grease the seal (only use silicone grease) and replace the cartridge followed by the nut, cover and handle.

INSTALLATION GUIDELINES

1. Installation should be carried out by a competent engineer, in accordance with water regulations.
2. If isolating valves aren't already fitted, fit them to the inlet feeds.
3. Before installation, ensure supply pipes are flushed clean. Debris or loose particles will affect the efficiency of the ceramic disc cartridge. Failure to flush through pipe work before installation of taps may cause serious damage to the ceramic disc cartridge, for which bathstore will not be liable.
4. Hot & cold pressures should be equally balanced.
5. Before installation, flush the water system to ensure that there are no impurities that may enter the product.
6. Turn off the water supply before commencing work.
Install the water inlet pipes at floor level at 180mm center's
Tighten and fix the 3/4" connectors to the water pipe
Unscrew the cover nuts from the stand pipes
Screw the supplied connectors to the tap tails, then screw the 3/4" to the connectors
Unscrew the floor cover plates from the stand pipes, then slide the hoses through the stand pipe tubes and tighten the cover nuts, Refit the floor cover plates to the stand pipe tubes.
Centre the stand pipe tubes over the inlet pipes, mark the positions for the floor fixing holes using the floor cover plates as the template.
Fix the stand pipe to the floor using appropriate screws/bolts for the floor surface.
Finally put on the finishing caps over the screw heads.

