



SHOWERS AND SHOWER-HEADS MAINTENANCE INSTRUCTIONS

Dear Customers,

You have chosen a Nikles product: thank you for your trust in us.

All NIKLES products are manufactured using different materials to meet every need, in line with the latest technology.

If you want high quality surfaces and durable materials, please follow our instructions.

Damage caused by inappropriate maintenance is not covered by Warranty.

If you notice that the product no longer conforms to the use intended for it, replace it as soon as possible so as to not cause any damage to people and buildings.

Depending on the area where you live, water may contain different percentages of limescale/impurity.

After use, water drops evaporate and may leave lime scale residual on the surfaces.

To prevent this, dry carefully all wet areas after use.

A periodical and continuous maintenance may avoid lime scale build-up.

Showers and Showerheads maintenance is very easy and allows the products to work at their best.

Lime scale can be easily from showerhead jets.

The Filter or restrictor has to be periodically cleaned removing any possible residual of lime scale and impurities.

To access this remove the head from the wall or ceiling fitting. The restrictor or filter is in the threaded collar on top of the head.

In case of failure to comply with these instructions, irretrievable damage may occur to products.

If you live in areas with very hard water, we suggest installing a water softener.

Most of our products have rub clean nozzles. Limescale can build up inside and around the outside of the nozzles.

Rubbing them regularly with a finger clears any limescale, and ensures even water flow across the shower head.

Do not use abrasive sponges and microfiber cloths, corrosive cleansers, solvents and acids.

We recommend that you do not use any anti-lime scale products and cleaners containing vinegar and acetic acid.

Chemical cleaning agents may damage the product.

Clean Nikles products using only mild soap and a wet cloth. Stubborn stains should not be removed using corrosive or abrasive cleansers.

On all products, use a biodegradable cleanser, rinse thoroughly with water and dry with a soft cloth.

KEEP THE NIPPLES CLEAN
(DAMAGE CAUSED BY INAPPROPRIATE MAINTENANCE IS NOT COVERED BY WARRANTY)

THE OBSTRUCTION MORE THAN 30% OF THE HOLES, WILL VOID THE WARRANTY

