


# BOTTLE TRAP-SMALL WITH EXTENSION PIPE CHROME

20004011200

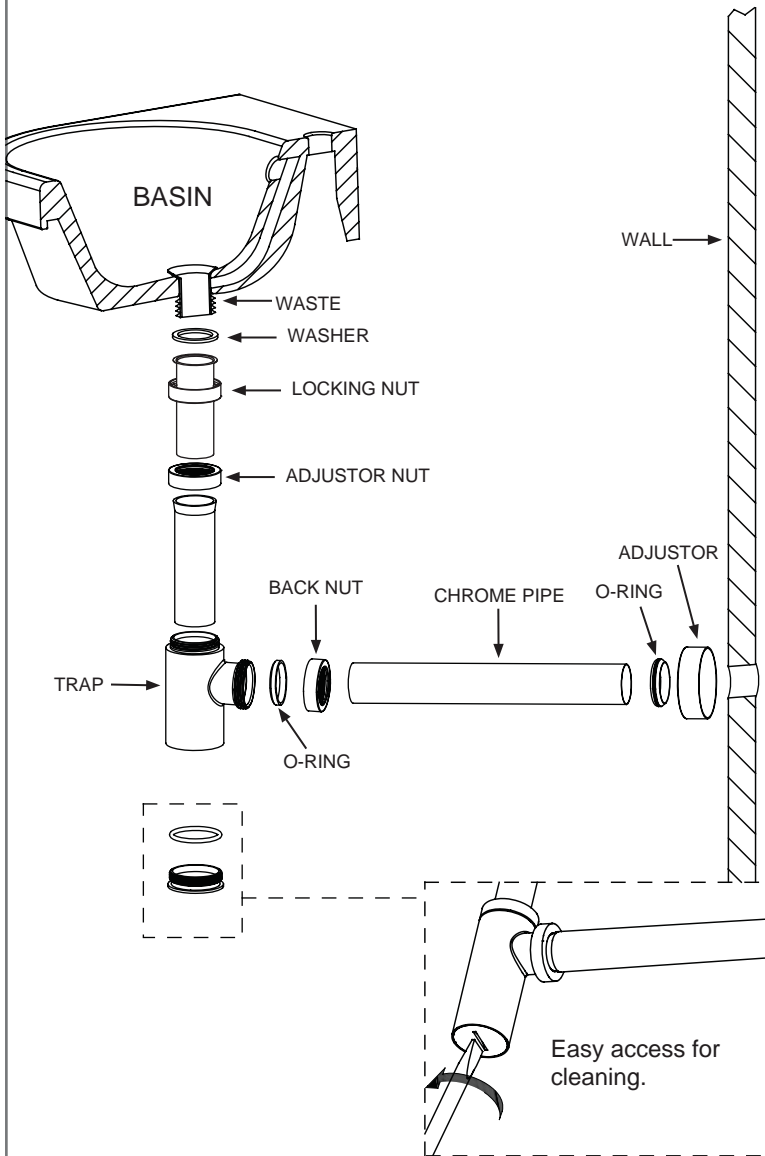

## Installation

1. Lubricate the o-rings of adaptor with silicon based grease.
2. Cut the tube not supplied protruding through the wall to length required for adaptor to finish against wall.
3. Slide adaptor over the tube.
4. Place basin trap under basin waste and tighten locking nut to basin waste.
5. Loosen adjustor nut and adjust height of trap so that the back water exit is in position to allow for around 5 degree fall back to the wall , then tighten locking nut.
6. Cut chrome pipe to length required to fit between the back of the basin trap and the adaptor.
7. Remove basin trap from basin waste.
8. Push and twist chrome pipe fully into adaptor.
9. Loosen back nut and remove the o-ring. Then place this nut and o-ring over the end of chrome pipe.
10. Slide the back water exit of the basin trap over the chrome pipe, then slide back nut and o-ring into position and tighten.
11. Place the locking nut to the basin waste and tighten.

## Maintenance

We do NOT recommend you use any household cleaners to clean the product. The product should only be cleaned with soapy water, rinsed with clean water, and dried with a soft cloth.

## INSTALLATION INSTRUCTIONS



For any further information please contact Bathstore on: **0845 873 8843**

Or visit our web-site at [www.bathstore.com](http://www.bathstore.com)  
The manufacturer reserves the right to make technical modifications without prior notice.