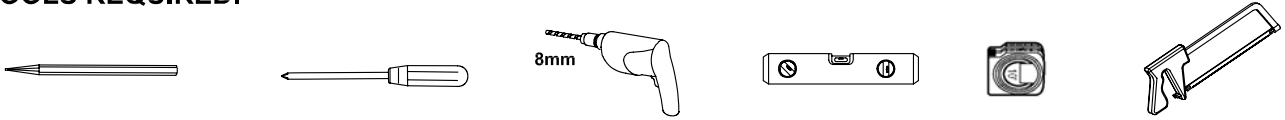


Straight Shower Pole Installation Instructions 20005000890

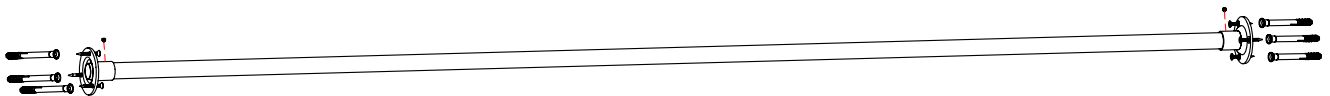
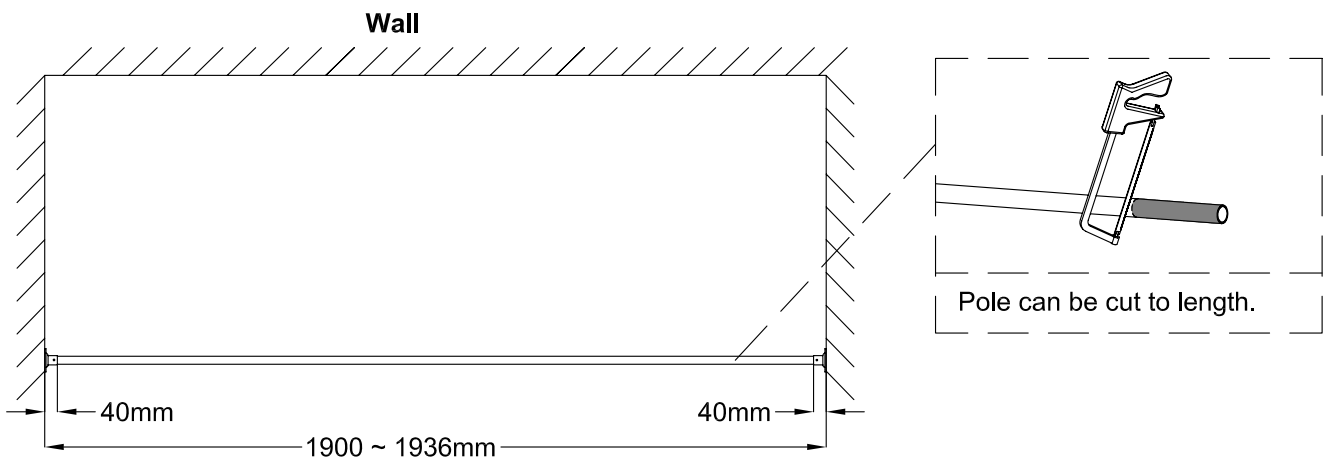
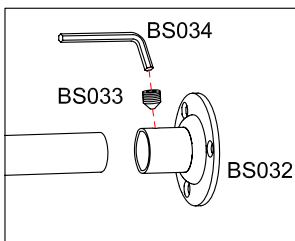
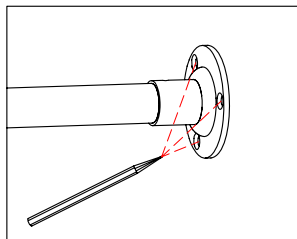
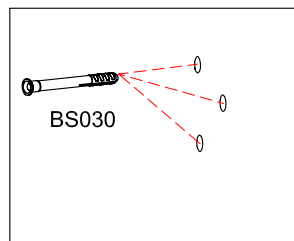
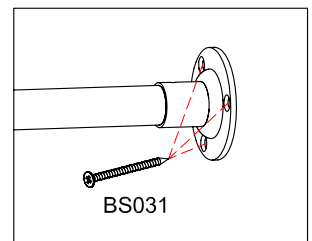
TOOLS REQUIRED:

PARTS SUPPLIED:

 BS030
6x

 BS031
M4.2*35mm
6x

 BS032
2x

 BS033
M4*3mm
2x

 BS034
2mm
1x

Fig 1:

Fig 2:

Fig 3:

Fig 4:


- 1: Measure out the required length. (If it is necessary, please cut the pipe for required length.)
- 2: Fit the pole into the wall brackets and secure with grub screws (figure 1).
- 3: Hold in its intended position, using a spirit level as a guide, and mark the screw holes at each end (figure 2).
- 4: Drill holes on the marked positions and insert wall plugs supplied (figure 3).
- 5: Fit the pole to the wall with the screws (figure 4), note that the wall fixings supplied are suitable for masonry walls.