



# BASICS SMARTLINE 1700 SLIDER DOOR CHR


## Installation Instructions












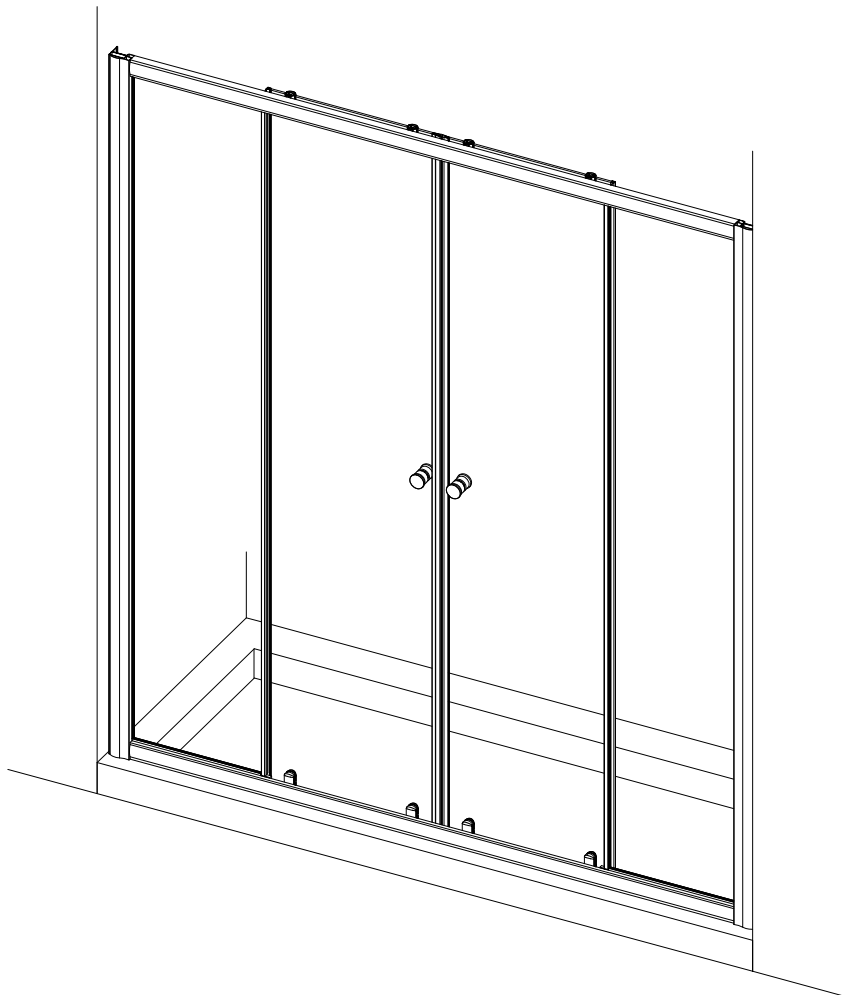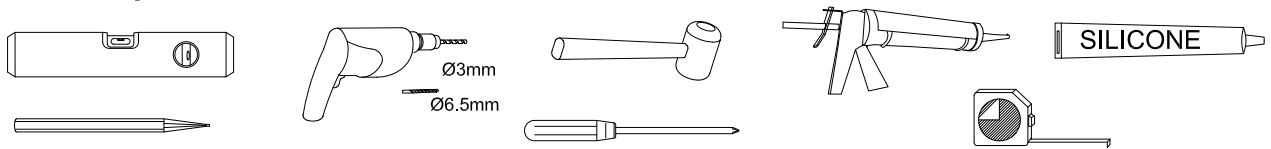

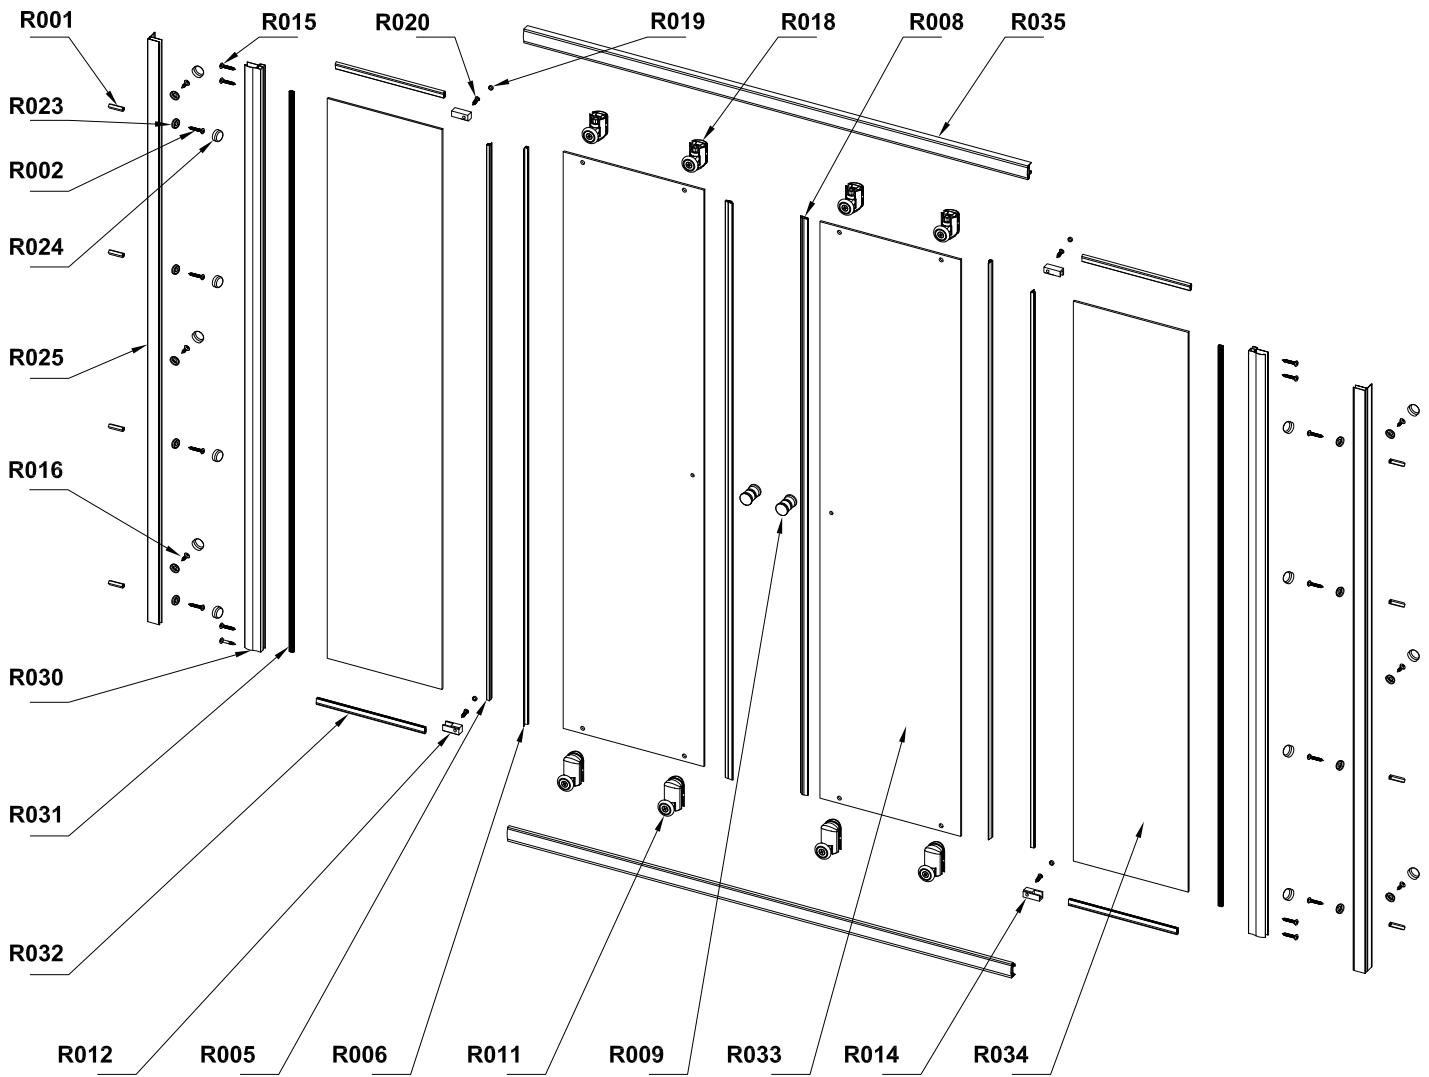







(41300014820)

- Prior to installation check that all fittings have been supplied.
- The tray should be installed by a competent person. The tray should be level, the walls should be tiled down to the tray, and the horizontal gap between the tiles and tray must be sealed with silicone sealant to ensure water-tightness.
- Handle with care. Impacts can damage both the glass and the frame.
- Please check for any hidden pipes or cables before drilling holes in the wall.
- The success of the installation and operation is, of course, dependant on the squareness, alignment and construction of the walls to which the enclosure is fixed. If the walls are significantly out of true we recommend dry lining the walls to ensure they are both vertical and at 90 ° to each other.
- The wall fixings supplied may not be suitable for your installation. You may need to source alternatives depending on the construction of the wall you are fixing to.
- If installing with a side panel please refer to the side panel instructions for details.

### Tools Required:





R001		8x	R032		4x	R034	fixed glass panel	2x
R023		14x	R012		2x	R035		2x
R002		8x	R005		2x	R008		2x
R024		14x	R006		2x	R018		4x
R025		2x	R011		4x	R019		4x
R016		6x	R009		2x	R020		4x
R030		2x	R033	sliding door	2x	R015		8x
R031		2x	R014		2x			

