
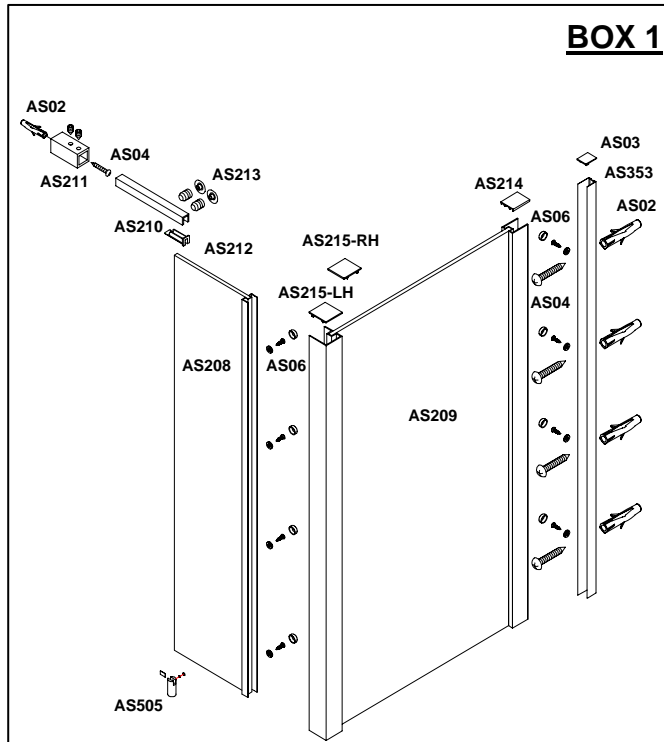
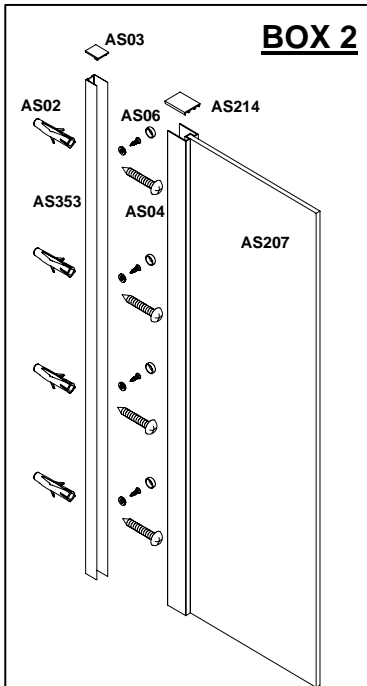
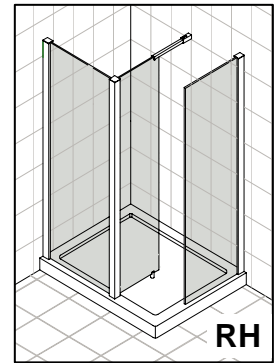
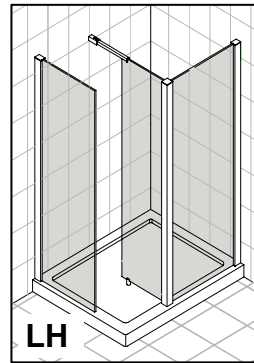


ATLAS WALK-IN 1400/1700 CHROME FRAME CLEAR GLASS CORNER INSTALLATION

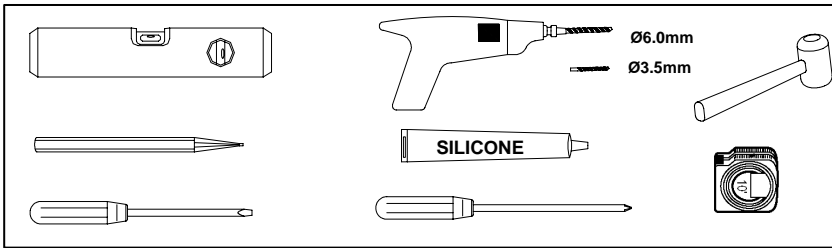

AS353 1x	AS208 1x	AS209 1x
AS210 1x		AS211 1x
AS212 1x	AS213 2x	AS03 1x
AS215-LH 1x	AS215-RH 1x	AS214 1x
AS505 1x	AS122 3mm 1x	AS07 4mm 1x
AS02 5x	AS04 ST4 *50mm 5x	AS06 ST4 *12mm 8x

* Required only with corner installation.

AS353 1x	AS207 1x	AS03 1x	AS214 1x	AS02 4x
		AS04 4x ST4 *50mm	AS06 4x ST4 *12mm	

