


TRANSITION ROSE GOLD BATH CLICK CLACK WASTE FOR DOUBLE ENDED BATH

20004011229

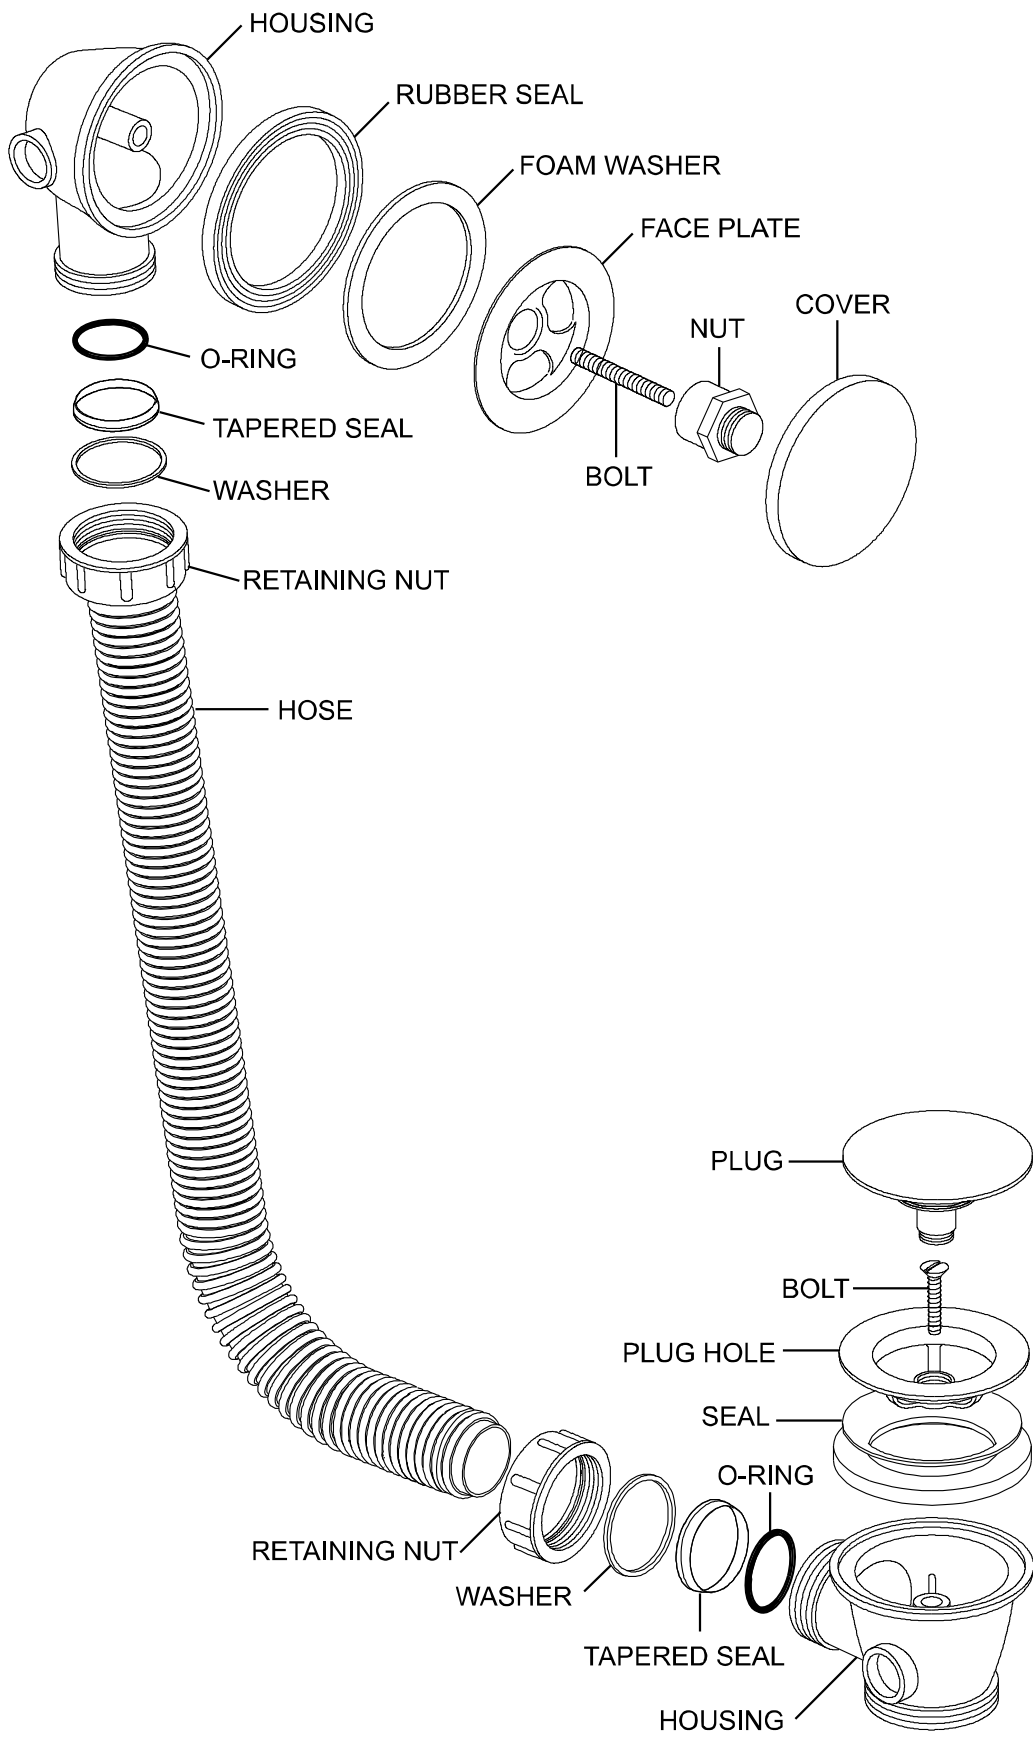

INSTALLATION INSTRUCTIONS

Overflow Installation

1. Place the rubber seal into the housing, making sure they are aligned centrally with the rear of the bath cut out.

Note: Make sure the ridges on the rubber seal are facing the rear side of the bath.

2. Whilst holding the back of the housing and rubber seal, place the foam washer and face plate aligning with the housing from the front of the bath cut out.
3. Tighten the connection between the housing and front plate with the bolt and nut.
4. Once tightened, screw the decorative cover to the nut.
5. Pass retaining nut, clear washer, tapered seal and O-ring over the flexible hose as shown.

Note: The O-ring must be placed 25mm off the edge of the hose. The tapered seal should be in the orientation shown.

6. Hand tighten the hose assembly to the housing.

Waste Installation

1. From the bottom of the bath push the seal through the bath hole.

Note: The thin side should sit on the top face, the thicker side on the rear face of the bath.

2. Place the housing flush against the bottom of the seal.
3. Whilst holding the housing and seal from the bottom, place plug hole flush with the upper section of the seal inside the bath.
4. Once aligned screw the bolt and tighten, then screw the plug onto the plug hole.
5. Pass retaining nut, clear washer, tapered seal and O-ring over the flexible hose as shown.

Note: The O-ring must be placed 25mm off the edge of the hose. If cutting the hose make sure there is sufficient length to reach both the upper and lower housing bodies. Avoid a 'Dead leg' on the hose.

7. Hand tighten the hose assembly to the housing.

Maintenance

We do NOT recommend you use **any** household cleaners to clean the product. The product should only be cleaned with soapy water, rinsed with clean water, and dried with a soft cloth. Failure to follow this recommendation will void any warranty.



Or visit our web-site at www.bathstore.com

The manufacturer reserves the right to make
Technical modifications without prior notice.